

XUPERMASK

USER MANUAL







XUPERMASK WHAT'S IN THE BOX



Congratulations on your purchase of XUPERMASK! Please inspect the contents of this box immediately. Your XUPERMASK arrives with the following components:


1. XUPERMASK, WITH 1ST FILTER SET, TWO MEDIUM EAR TIPS AND TWO PUCK COVERS FOR INTAKE FILTRATION
2. XUPERKIT CARRYING BAG
3. USB-C CHARGING CABLE (with cable tie)
4. REPLACEMENT HEPA FILTERS (2 SETS)
5. FABRIC MASK
6. SMALL & LARGE EARTIPS
7. HANG TAGS, TUG TIGHT AND ADDITIONAL PACKAGING PROVIDED WITH PURCHASE

Please notify us immediately if you believe any item is missing. XUPERMASK will not replace any of the misplaced components of the XUPERMASK under any circumstances.

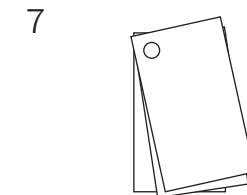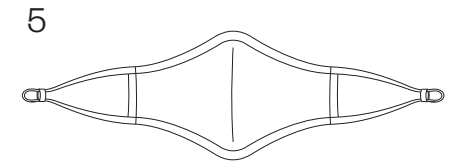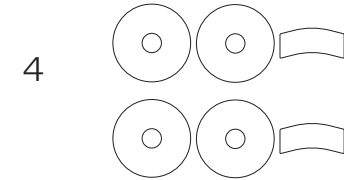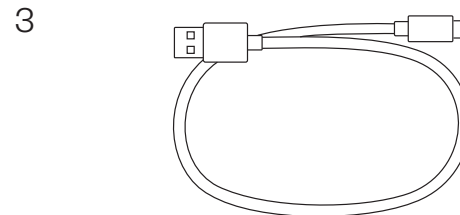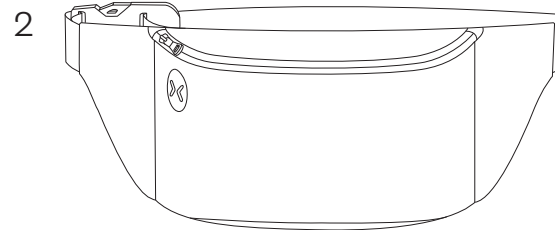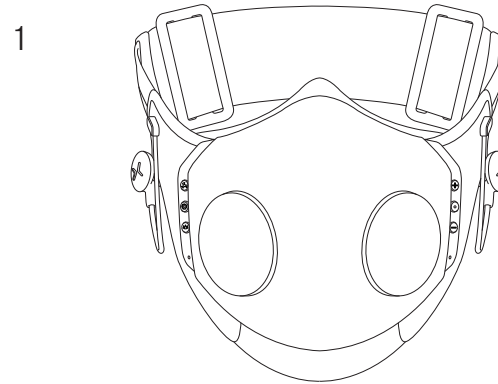




FRONT OF MASK

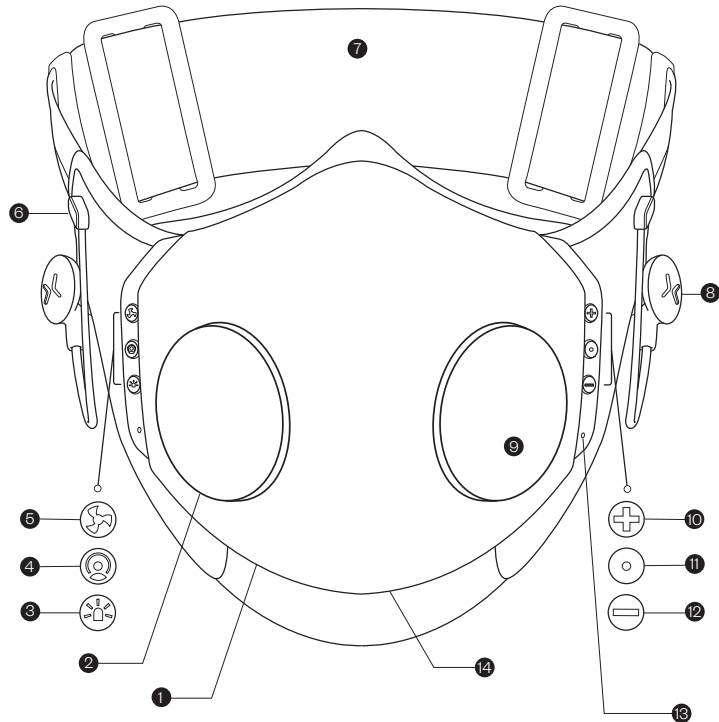

- | | |
|---------------------|--------------------------|
| 1. CHARGING PORT | 8. ANC EARBUDS |
| 2. LED PUCK LIGHTS | 9. FAN & HEPA FILTER |
| 3. LIGHT CONTROL | 10. AUDIO UP |
| 4. ANC CONTROL | 11. MULTI-FUNCTION |
| 5. FAN CONTROL | 12. AUDIO DOWN |
| 6. EARBUD DOCKING | 13. LED INDICATOR LIGHTS |
| 7. ADJUSTABLE STRAP | 14. EXHAUST PORT |

BACK OF MASK

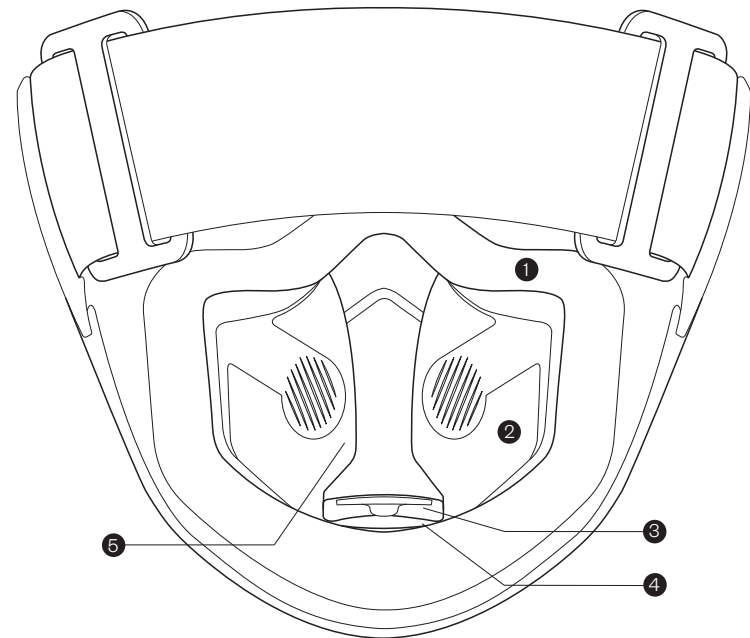

- | |
|-------------------------------|
| 1. FACE SEAL |
| 2. BACK FAN PLATE |
| 3. EXHAUST HEPA FILTER |
| 4. EXHAUST PORT |
| 5. NOISE REDUCTION MICROPHONE |

XUPERMASK **BUTTON FUNCTION DIAGRAM**




WEARERS RIGHT

WEARERS LEFT

FAN CONTROL
(High/Medium/Low)

ANC CONTROL
(ANC/Ambient/Off)

LIGHT CONTROL
(On/Off)

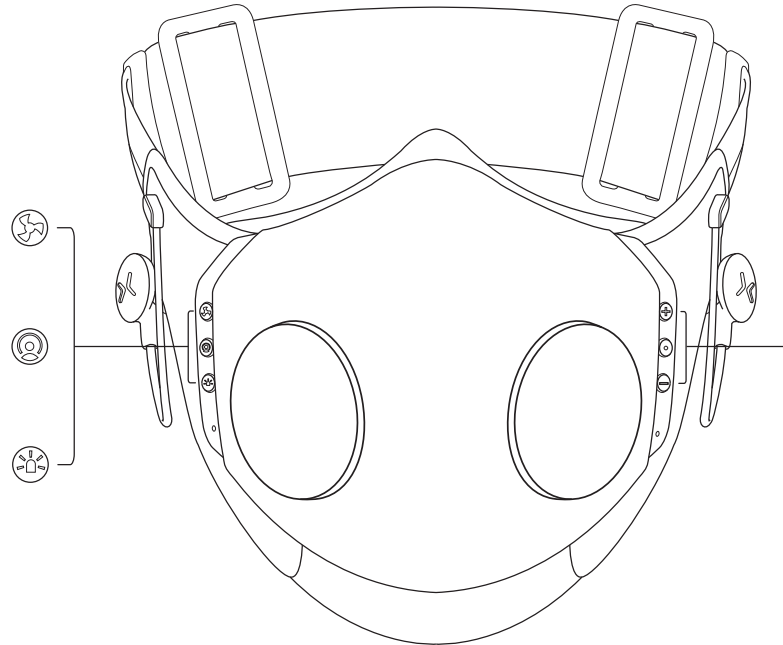

AUDIO UP

Volume Up (single press)
Next Track (double press)

MULTI-FUNCTION

Audio Power On/Off (3 second press)
Forced Bluetooth Pairing (5 second press while off)
Play/Pause Audio (single press)
Answer/End Call (single press)
Decline Call (double press)

AUDIO DOWN

Volume Down (single press)
Previous Track (double press)

XUPERMASK LED INDICATOR LIGHT DIAGRAM



WEARERS RIGHT

CHARGING/FAN INDICATOR LIGHT

- Fan Power On (Green On)
- Low Battery <20% (Red On)
- Charging (Yellow Pulse)
- Full Charge (Green On)

WEARERS LEFT

BLUETOOTH INDICATOR LIGHT

- Power On (White Blinking) ○
- Pairing Mode (White/Red Blinking) ●
- Paired (White On) ○
- Power Off (Red Blink) ●



VOICE PROMPTS 

- XUPERMASK ON
- READY FOR PAIRING
- CONNECTED
- DISCONNECTED
- AMBIENT
- NOISE CANCELLATION
- NOISE CANCELLATION OFF
- BATTERY LOW
- POWER OFF

XUPERMASK CHARGING




Insert provided USB-C charging cable into external charging port located on the front of the mask.

- LED puck lights pulse to indicate charge
- Lights stay on unless turned off with the Light Control Button
- XUPERMASK will reach full charge in 2 hours.*
- Charge fully before first use.
- Do not charge while XUPERMASK is wet.

BATTERY INDICATOR LIGHT

- Green Light – Battery Fully Charged
- Red Light – Battery Is < 20%
- Yellow Light – Battery Is Charging

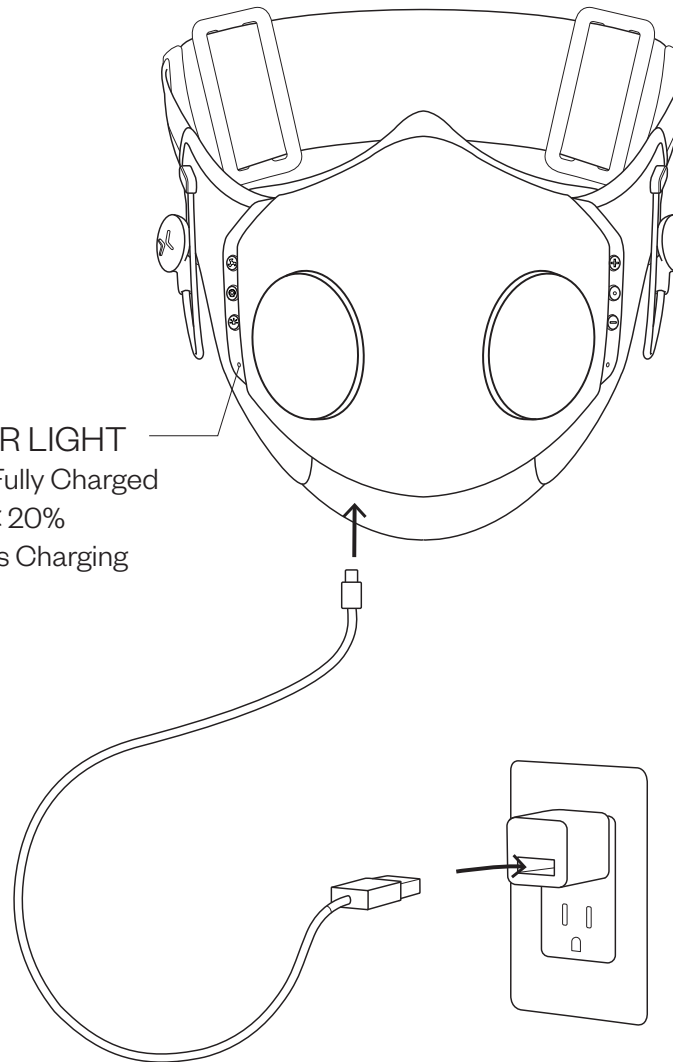

*Testing conducted by XUPERMASK in January 2021 using preproduction XUPERMASK. At time of testing, XUPERMASK charging time was approximately 2.5 hours with a standard wall charger using the 2 meter long provided USB cable. Testing consisted of full XUPERMASK battery charging. Battery life may also depend on device settings, environmental conditions, usage variables, and many other factors.

*Testing conducted by XUPERMASK in January 2021 using preproduction XUPERMASK. Fan speed was set at low, medium, and high modes. At time of testing, the current maximum battery discharge time on lowest function is approximately 7.57 hours. At time of testing, the current minimum battery discharge time on highest function is approximately 5.04 hours. Testing consisted of full XUPERMASK battery discharge while running the fan. Battery life may also depend on device settings, environmental conditions, usage variables, and many other factors.

When charging your Xupermask, always use common sense, handle carefully, and use proper precautions.

Do not charge your Xupermask when there is moisture present, or the ports, cables, batteries, or any components are wet, including from perspiration or environmental conditions.

Do not charge your Xupermask with damaged cables, power adaptors, or chargers. Take time to examine connectors, cables, and plugs and do not use if damaged, frayed, or bent.

Using damaged cables or chargers or charging when moisture is present or under wet conditions, can cause fire, electric shock, injury, or damage to your Xupermask or other property.

Do not charge your Xupermask while sleeping.

When charging your Xupermask, make sure the USB connector is fully inserted into both the Xupermask charging port and a compatible power adapter or portable charging unit. Only charge your Xupermask using an ordinary household outlet or a suitable portable battery recharging unit. Charge your Xupermask in a well ventilated area and avoid contact with metallic foreign objects (for example, coins, keys, jewelry, or other batteries) as these foreign objects may become warm or otherwise interfere with charging.


Avoid prolonged skin contact with the charging cable and connectors when the charging cable is connected to a power source because it may cause discomfort or injury. Take special care if you have a physical condition that affects your ability to detect heat against the body.

By purchasing and using a rechargeable product you acknowledge that you are familiar with all of the hazards, warnings, safety precautions, safety guidelines, laws, and regulations associated with the usage, charging, storage, disposal, alteration, dangers, precautions, and risks associated with the rechargeable product you are purchasing.

XUPERMASK EAR TIP OPTIONS



XUPERMASK comes with the medium sized ear tips attached.
Additional ear tips (small and large) are included in XUPERKIT.

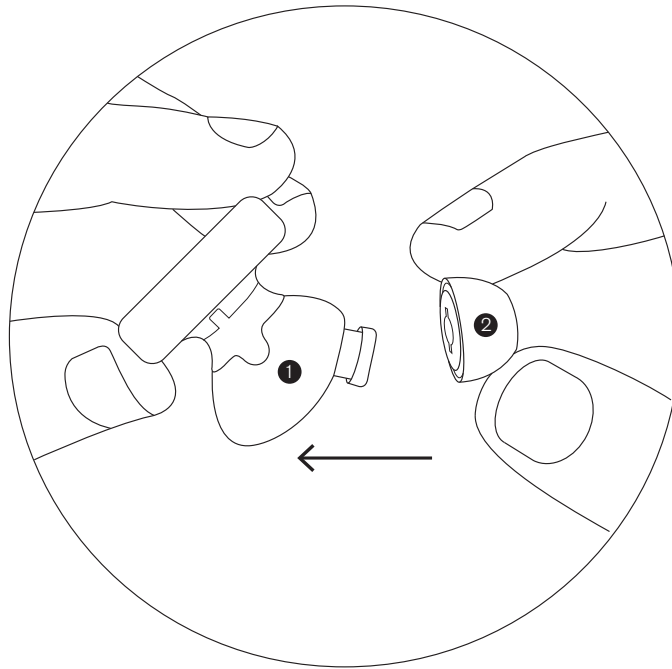


XUPERMASK HOW TO FIT



Loosen the straps and dock earbuds before wearing XUPERMASK.*

- Adjust straps for optimal fit. If extended wear results in imprints on the face, consider a looser fit.

*XUPERMASK must be worn correctly and according to the user guide.

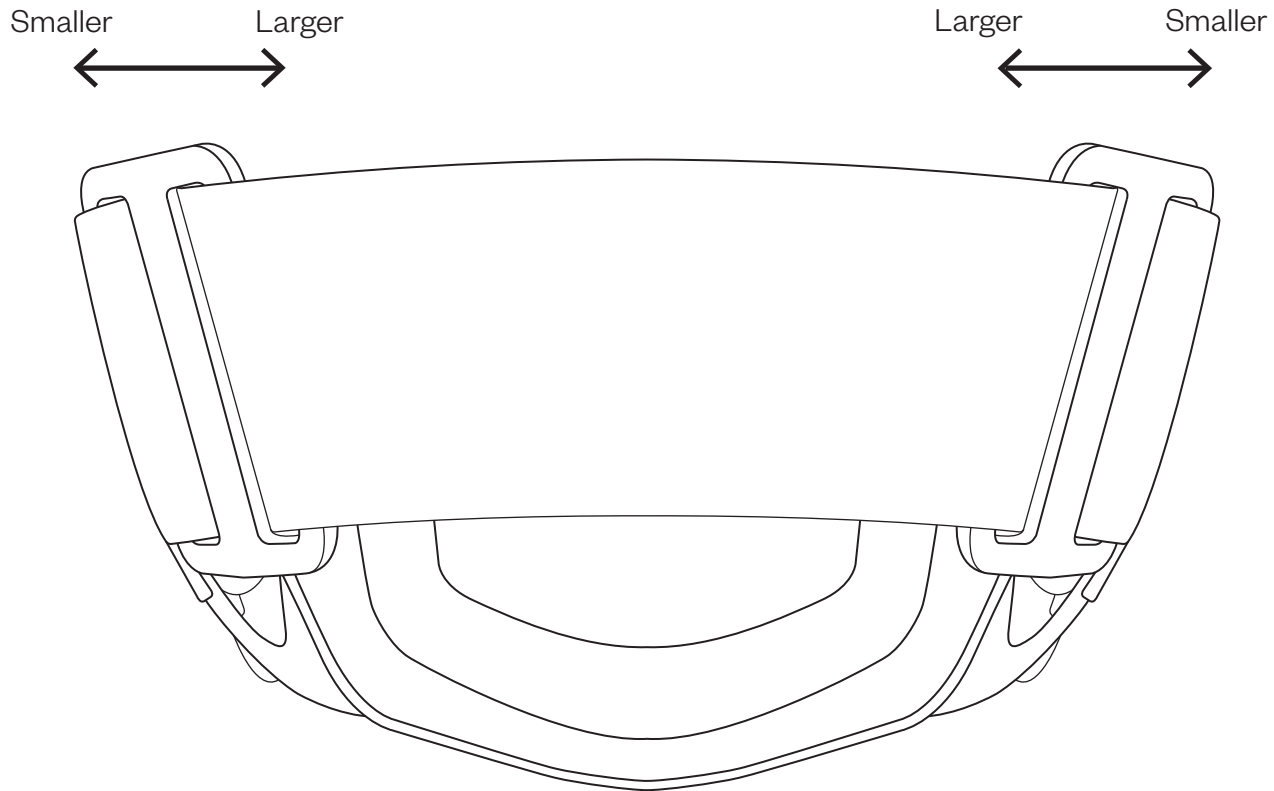


>< XUPERMASK PAIRING



XUPERMASK auto pairs after initial power on.

To force Bluetooth pairing:


- power off
- hold multi-function button for 5 seconds

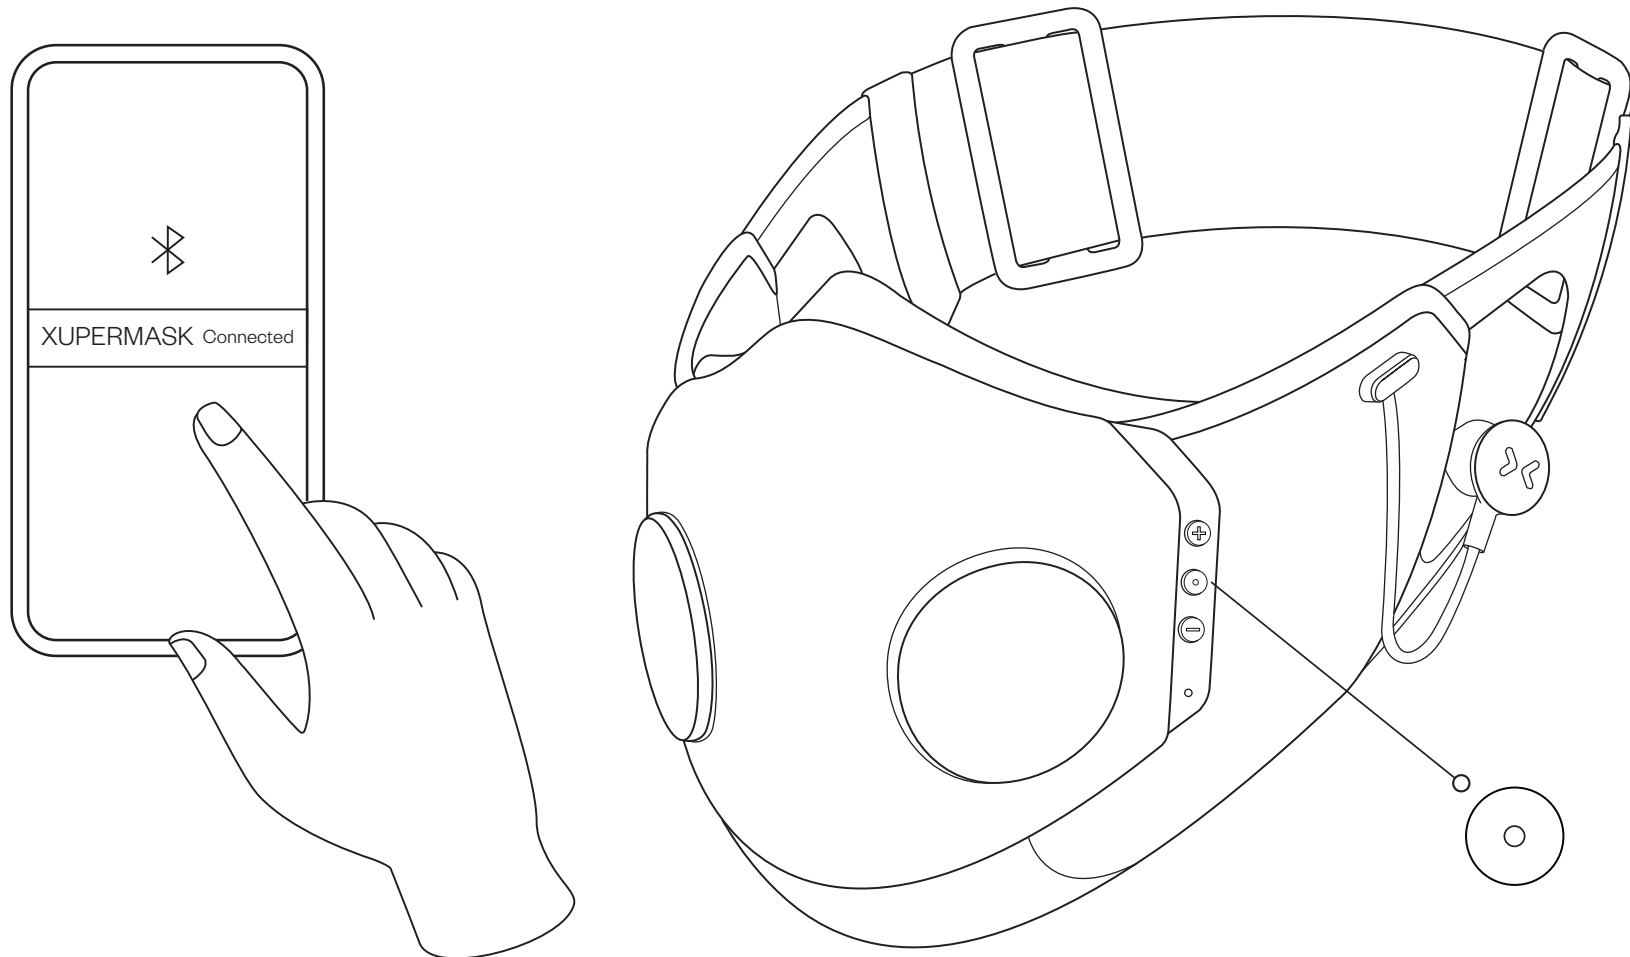

XUPERMASK EARBUD DOCKING



Magnetic docking system for when earbuds are not in use.

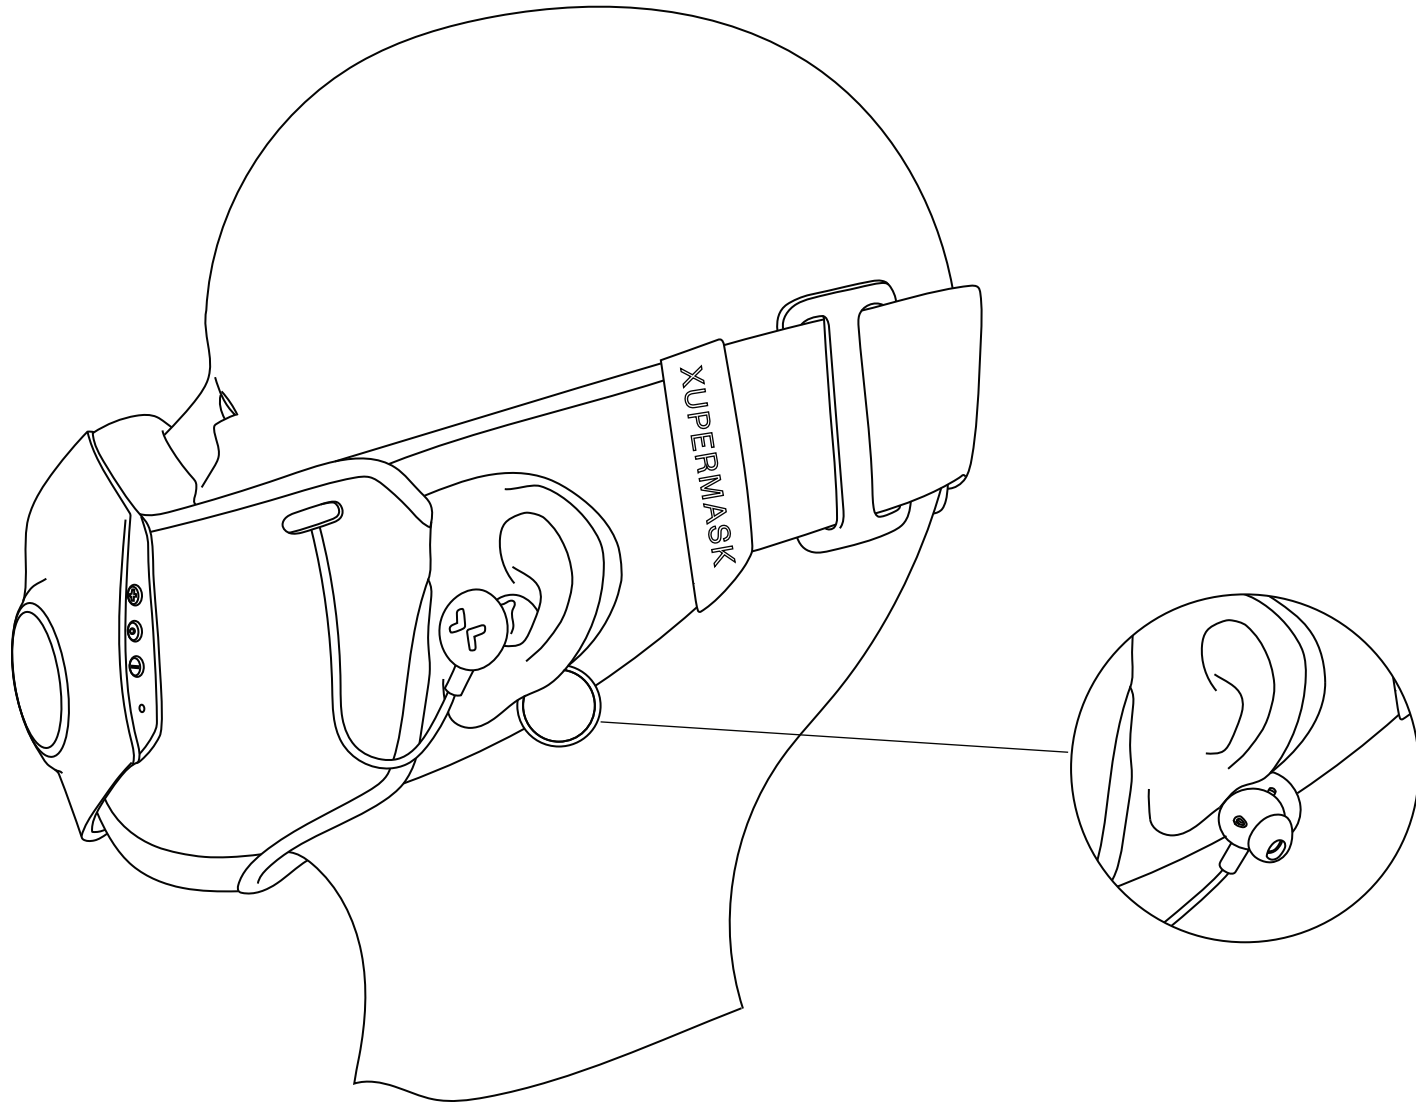

REPLACEMENT HEPA FILTER INSERTS

- Inserts should be replaced once a month.
- Inserts should be replaced more often with excess use and/or poor air quality environments.


TO PURCHASE:

www.XUPERMASK.com

1.888.987.7675


DUAL HEPA FILTER INSERTS

- Before replacing inserts, make sure the XUPERMASK is powered off.
- To replace inserts, unscrew front round fan covers counter-clockwise.
- Pull tab to remove both inserts.
- Change inserts every 30 days; more often when mask is being use in highly polluted environments.
- Do not use any sharp objects to remove the insert.
- Discard old inserts. Do not reuse, wash or try to clean used inserts.
- Replace with new inserts by aligning grooves and ensure the insert is level.
- Screw front round fan covers clockwise.
- Do not overtighten fan covers.

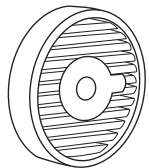


EXHAUST HEPA FILTER INSERT

- To replace the insert, pull tab and slide up.
- Discard old inserts. Do not reuse, wash or try to clean used inserts.
- Replace with new insert and press down until flush inside face gasket.

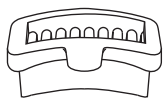

XUPERMASK may not perform as desired if the HEPA Filter Inserts are exposed to liquid, excessive heat or cold, or other extreme environmental conditions.

XUPERMASK may not perform as desired if the HEPA Filter Inserts are found to be inserted incorrectly.

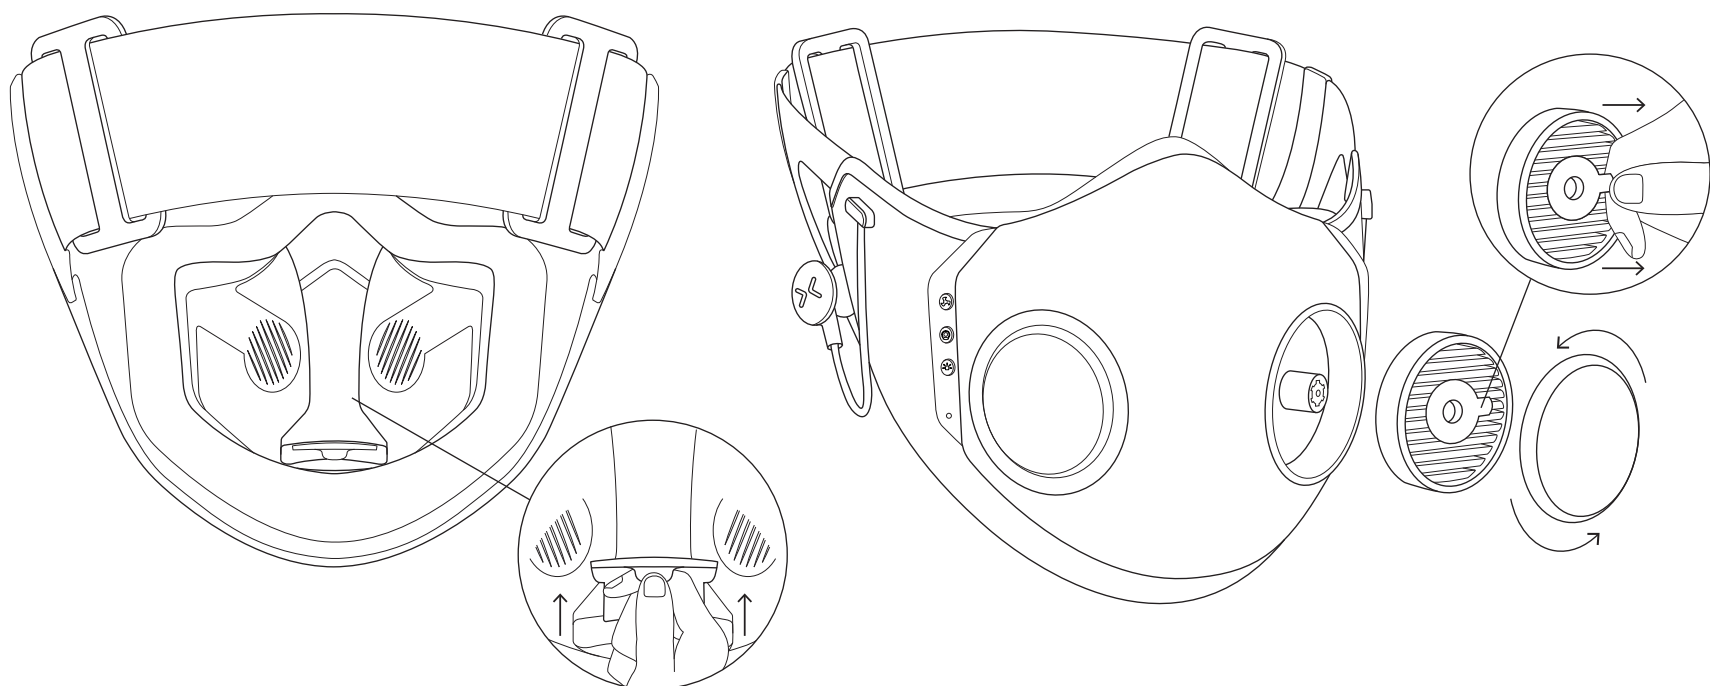


<> XUPERMASK CARE INSTRUCTIONS



Spot clean with mild soap and warm water only.

- Do not wash. Do not dry clean. Do not tumble dry. Do not bleach.
- Do not spray any liquids near fans or earbuds.
- Do not submerge XUPERMASK in water or expose to excessive moisture.
- Do not spray cleaners directly onto any surface of the XUPERMASK.
- Do not expose XUPERMASK to prolonged or excessive temperatures at or above 100°F/37°C or below freezing.
- Failure to follow care instructions will void the product warranty.
- XUPERMASK may not perform as desired if the XUPERMASK is stored outside of a room temperature environment with reasonable levels of humidity and protected from extremes of excessive or prolonged heat or cold.

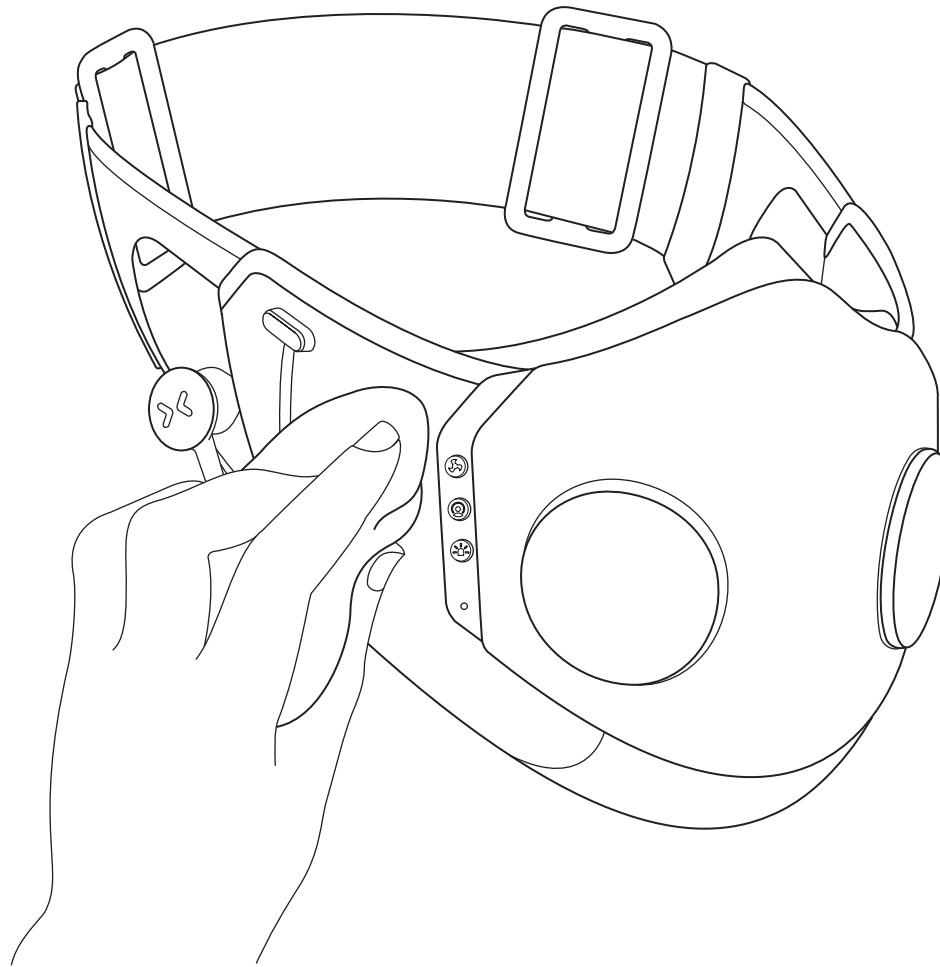


<> XUPERMASK **FACTORY RESET**



DO NOT perform a factory reset while XUPERMASK is charging.

To perform a factory reset, press and hold both the ANC Control button and the Volume Up button for 5 seconds.

To remove and reset all pairing history, ensure your XUPERMASK is in pairing mode, then press and hold for Volume Up and Volume Down buttons for 5 seconds.

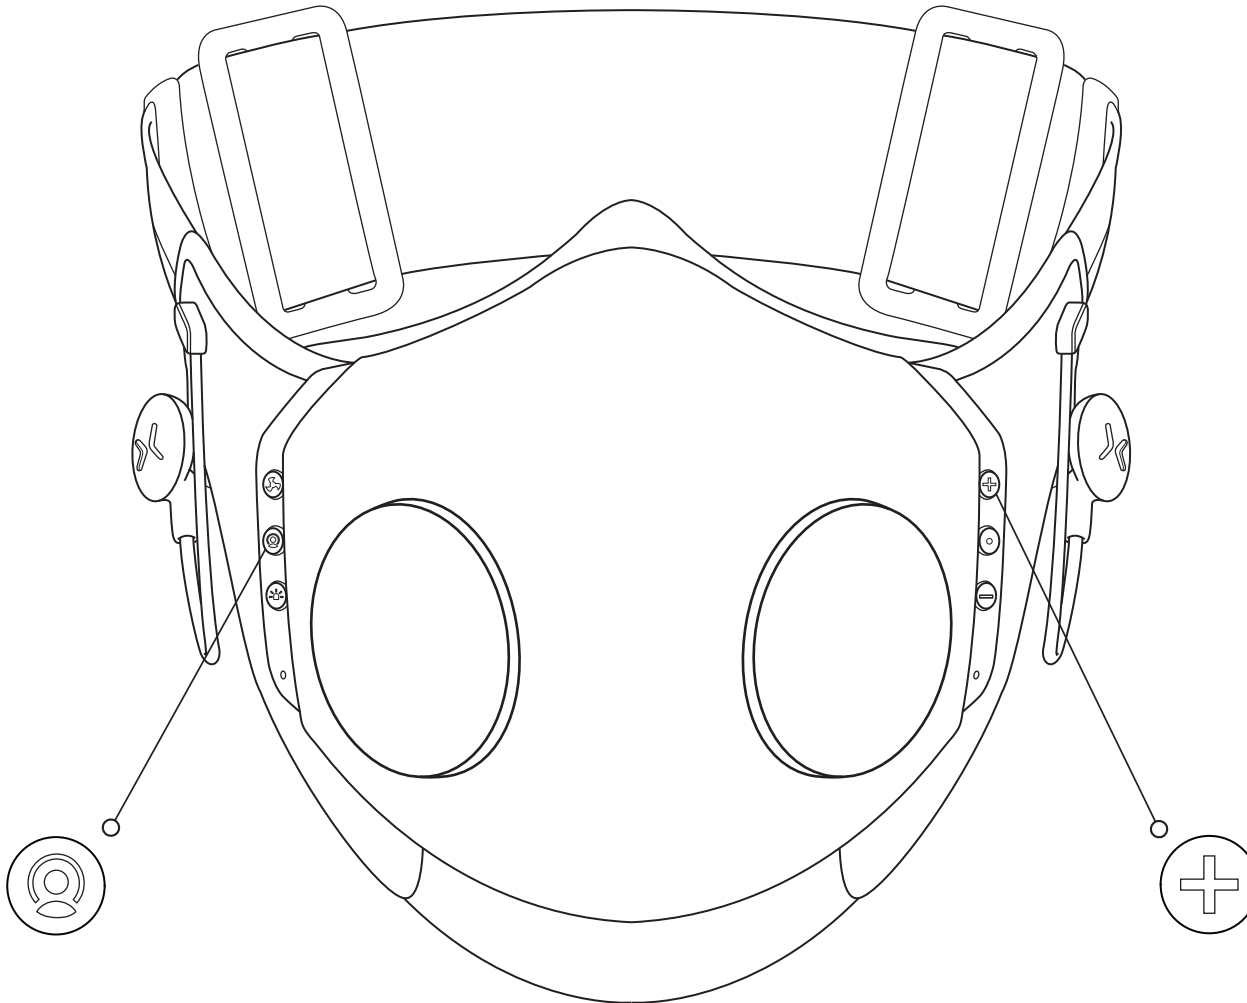

XUPERMASK LIMITED WARRANTY



Important notice: By using your XUPERMASK (the Product*), you are agreeing to be bound by the terms of this XUPERMASK Limited Warranty ("Warranty" or "Limited Warranty"). If you do not agree to the terms of the Warranty, do not use the Product and return it within the return period stated in the XUPERMASK Return Policy.

Who is covered by the warranty?

Only an end-user who purchases the product either directly from XUPERMASK OPCO LLO (hereinafter "XUPERMASK") or from an authorized dealer of XUPERMASK in the region or country in which the end-user is located ("end-user") is eligible for the Limited Warranty.

LIMITED WARRANTY

Subject to the terms and conditions, XUPERMASK warrants for a period of one (1) year from the date of original retail purchase by the end-user or from the receipt date for online orders and pre-orders ("Warranty Period") that the product will function without material defects in design, materials, and workmanship under normal and customary consumer usage and conditions and under any XUPERMASK written guidelines, requirements, or instructions, including, for example, environmental and storage requirements. Any nonconformity will be reported to XUPERMASK in a form and with supporting information reasonably requested by XUPERMASK to enable it to verify, diagnose, and correct the nonconformity.

WARRANTY CONDITIONS AND EXCLUSIONS

The Product must be used in accordance with any instructions provided with the Product. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, or failure to comply with instructions on the part of the user.

The Warranty is valid only if:

- (i) the original receipt issued to the original end-user by a XUPERMASK authorized dealer, specifying the date of purchase and serial number, is presented with the product to be repaired or replaced;
- (ii) none of the seals or serial numbers on the face of the product have been tampered with, removed, or defaced; and
- (iii) the product has not been altered, modified, damaged, abused, or neglected in any manner by the end-user or user or anyone else.

The Warranty shall not apply to:

- (a) consumable parts, such as filters or batteries that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship;
- (b) cosmetic damage, including but not limited to, scratches, dents, and broken plastic on ports, as well as normal wear and tear or otherwise due to the normal aging of the device; and
- (c) use of the product in combination with any third-party devices or products that have not been provided or recommended by XUPERMASK.

What will XUPERMASK do?

If, after due examination, XUPERMASK concludes in its sole discretion that the product has failed to satisfy the Warranty during the Warranty Period, XUPERMASK or its authorized service provider will, at XUPERMASK's discretion, either repair or replace the product in accordance with the conditions stipulated herein.

This section states end-user's sole and exclusive remedy, and XUPERMASK's sole and exclusive liability, for any breach of the Warranty by XUPERMASK with respect to the Product.

If XUPERMASK or its authorized service provider repairs or replaces the product (such repaired or replaced product, the "Replacement"), the Replacement shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair or replacement, whichever is longer. Repair or replacement may involve the use of functionally equivalent used, previously installed, or reconditioned units or parts. The parts or components that were replaced will become the property of XUPERMASK. All warranty returns must be sent to the company's designated address with prior written approval by XUPERMASK, and the following information must be provided:

1. Original purchase receipt, package, and accessories
2. Model number, color, and size
3. Serial number
4. Your contact information (name and phone number)

The Product must be returned with freight prepaid. If XUPERMASK determines that a Product returned by an end-user does not comply with this Warranty, then the end-user will also bear XUPERMASK's cost of shipping the Product back to the end-user.

The Warranty is in addition to other statutory rights and remedies the end-user may have under applicable laws where the product is sold. To obtain any applicable statutory rights or related warranty information or service in such cases, please first contact the dealer from which you purchased the Product, or the distributor that supplied the Product.

DISCLAIMERS: The Warranty set forth herein is exclusive and in lieu of all other warranties or conditions relating to the Product, and XUPERMASK expressly disclaims all other warranties and conditions, whether express, implied, or statutory, including any implied warranties of merchantability, non-infringement, fitness for a particular purpose, and any warranties arising out of course of dealing or usage of trade and against hidden defects, to the fullest extent permitted by law. XUPERMASK does not warrant that the Product will meet end-user's requirements or that use of the Product will be uninterrupted or error free. No advice or information, whether oral or written, obtained from XUPERMASK or elsewhere will create any warranty not expressly stated in this warranty.

XUPERMASK must be worn correctly and according to the user guide. XUPERMASK may not perform as desired if the XUPERMASK is stored outside of a room temperature environment with reasonable levels of humidity and protected from extremes of excessive or prolonged heat or cold.

XUPERMASK may not perform as desired if the filters are found to be inserted incorrectly. XUPERMASK may not perform as desired if the filters exposed to liquid, excessive heat or cold, or other extreme environmental conditions.

Please review the user guide, product labeling, and hang tags carefully. Any warranty is void if the XUPERMASK or any of its component parts are found, in our sole discretion, to be misused by excessive stretching, pulling, tightening or force, opening, tampering, or altering with the fans, motors, wiring, hardware, or any other components of the XUPERMASK; altering, defacing, or removing any of the external branding or engraving including the serial number and other markings on XUPERMASK, or removal of any external components of the XUPERMASK that is not outlined in the user guide.

Please review the user guide, product labeling, packaging, and package inserts, and hang tags carefully. Any warranty is void if the XUPERMASK is subjected to excessive moisture including, but not limited to, excessive sweating or applying sprays or liquids inside the XUPERMASK in a manner that interferes with the functionality of the POB board or other electronic components.

Please review the user guide, product labeling, packaging, and package inserts, and hang tags carefully. Any warranty will be void and XUPERMASK may not perform as desired if the mask is exposed to direct sunlight, rain, fog, heat, cold, or other excessive environmental condition for an extended period.

Please review the user guide, product labeling, packaging, and package inserts, and hang tags carefully. Any warranty is void in the event that the product becomes damage or does not work as desired due to the failure to follow the instructions.

XUPERMASK is for adult use only and not intended for anyone under 16. XUPERMASK contains small parts and is not a toy.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary by jurisdiction.



Terms & Conditions

IT IS YOUR RESPONSIBILITY TO FAMILIARIZE YOURSELF WITH THE USER MANUAL, WARNINGS AND ANY DOCUMENTATION PROVIDED TO YOU BY XUPERMASK OPGO LLC PRIOR TO EACH USE AND TO USE THE XUPERMASK PRODUCT PROPERLY, INCLUDING AS FOLLOWS:
Do not submerge XUPERMASK in water. Do not spray cleaners directly onto any surface of the XUPERMASK. Do not expose XUPERMASK to prolonged temperatures above 40C or below freezing. XUPERMASK is intended for consumer use only. XUPERMASK is not a medical device. XUPERMASK MASK is not a toy - please keep out of reach of and do not allow children to play with it. Never tamper with, open, alter or attempt to repair the XUPERMASK. If the XUPERMASK MASK malfunctions or fails to perform as expected, contact us at info@XUPERMASK.com.

Avoid Hearing Damage

To prevent possible hearing damage, do not listen at high volume levels for prolonged periods of time.

Prolonged Heat Exposure

Use common sense to avoid situations where your body is in prolonged contact with the product or its power adapter when it's operating or plugged into a power source, as sustained contact with warm surfaces may cause discomfort or injury. Take special care if you have a physical condition that affects your ability to detect heat against the body.

Disposal and Recycling Information

The symbol on the right indicates that this product and /or batteries should not be disposed of with household waste. When you decide to dispose of this product and/or its batteries, do so in accordance with local environmental laws and guidelines.

European Union – Disposal Information

The symbol on the right means that according to local laws and regulations your product and/or its batteries shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its batteries at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Built-in Batteries

Don't attempt to replace or remove the batteries yourself – you may damage the batteries, which could cause overheating and injury. Dispose of batteries according to your local environmental laws and guidelines.

Prop 65 Warning

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information: www.P65Warnings.ca.gov



Operating Instructions

Press and hold the Multifunction Button for 3 seconds for audio on/off. Short press for play/pause or to answer a call/hang up. Double short press to decline a call. Press ANC button to cycle between ANC/Ambient/off. Single press Up/Down Buttons for volume up/down, or double press for next /previous track. To charge your XUPERMASK, plug USB cable into mask and connect to power source. Disk indicator light will pulse twice and stays on to indicate charging. XUPERMASK fully charges in two hours. LED Indicator light will pulse red every five seconds to indicate low battery level (20% or lower). To pair XUPERMASK, while XUPERMASK is turned off, press and hold multifunction button, and listen for voice prompt to pair. Connect to mobile device by selecting XUPERMASK. Indicator light will flash white and red while pairing. If pairing is unsuccessful, manually pair by pressing down multifunction button for 5 seconds while audio is powered off.

Cleaning Instructions

Do not wash. Do not dry clean. Do not tumble dry. Do not bleach. Do not spray any liquids near the fan or earbuds. Failure to follow the cleaning instructions will void the product warranty. Spot clean with mild soap and warm water

FCC Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier Trade Name: Xupermask, Model No.: XMSK01

Responsible Party – U.S. Contact Information

XUPERMASK OPGO, LLC

10960 Wilshire Blvd, Floor 5, Los Angeles, CA 90024

xupermask.com



WARNING: This face mask has not been FDA cleared or approved. The product has been authorized by FDA under an EUA for use as source control by the general public as well as by HCP in healthcare settings as to help prevent the spread of infection or illness during the COVID-19 pandemic. This product is authorized only for the duration of the declaration that circumstances exist justifying the authorization of the emergency use of medical devices, including alternative products used as medical devices, during the COVID-19 outbreak, under section 564(b)(1) of the Act, 21 U.S.C. §360bbb-3(b)(1) unless the authorization is terminated or revoked sooner. The face mask is intended to be used with the HEPA filter inserts. This product, which is not for medical use or for use in a high infection risk clinical setting, is not a respiratory protective device, nor a substitute for filtering face piece respirators or for surgical face masks. It is not intended to be used to provide liquid barrier protection or for high-risk aerosol generating procedures.

ISED Regulatory Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

XUPERMASK Limited Warranty

XUPERMASK OPCO LLC warrants the included hardware product against defects in materials and workmanship for one (1) year from the date of original retail purchase or received date for online orders and pre-orders. XUPERMASK OPCO LLC doesn't warrant against normal wear and tear, nor damage caused by accident or abuse. To obtain service, contact us at info@xupermask.com. Available service options are dependent on the country in which service is requested and may be restricted to the original country of sale. Shipping charges may apply. Subject to full terms and detailed information on obtaining service or warranty replacement available at www.xupermask.com/legal/warranty

Release and Indemnity

You hereby agree to hold harmless and indemnify and defend XUPERMASK OPCO LLC and its officers, directors, employees and agents from and against any and all liabilities, losses, damages, demands, claims, suits, actions, judgments, causes of action, assessments, costs and expenses, including, without limitation, interests, penalties, attorneys' fees, any and all expenses incurred in investigating, preparing and defending against any litigation, commenced or threatened, or any claim whatsoever, and any and all amounts paid in settlement of any claim or litigation, asserted against, imposed upon, or incurred or suffered by any of them, directly or indirectly, as a result of or arising out of your use of the XUPERMASK Product and or accessories.

If you are a California resident, you waive California Civil Code Section 1542, which says: "A general release does not extend to claims which the creditor does not know or suspect to exist in his favor at the time of executing the release, which if known by him must have materially affected his settlement with the debtor." If you are a resident of another jurisdiction, you waive any comparable statute or doctrine.

Applicable Law

This Limited Warranty shall be governed by the laws of the State of California, USA, without giving effect to any conflict of laws or principles that may provide the application of the law of another jurisdiction. Consumers in some jurisdictions may have legal rights under applicable national legislation governing the sale of consumer goods, including, without limitation, national laws implementing EC Directive 99/44. These rights are not affected by the warranties in this Limited Warranty.

XUPERMASK IS NOT A MEDICAL DEVICE

XUPERMASK IS NOT A TOY AND IS NOT INTENDED FOR CHILDREN UNDER THE AGE OF 16

YOUR USE OF THE XUPERMASK PRODUCT IS SUBJECT TO ADDITIONAL TERMS AVAILABLE BELOW, WHICH MAY BE UPDATED FROM TIME TO TIME:

<https://www.XUPERMASK.com>

XUPERMASK OPCO LLC

10960 Wilshire Blvd, 5th Floor, Los Angeles CA 90024

1-888-987-7675

Contacts

General Information
Customer Support Email
Press Inquiries
Customer Support Phone Number
Social Media

www.xupermask.com
chat@xupermask.com
press@xupermask.com
1.888.987.7675
@xupermask

Trademarks, Patents and Licenses

Unless otherwise stated, words and logos marked with [™] or [®] are trademarks registered or owned by XUPERMASK and/or its affiliates.

Bluetooth[®] and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc. and licensed to XUPERMASK.

Other products, services and names used in this document may have been trademarked by their respective owners.

The publication of this information does not imply that any license is granted under any patent or other rights owned by XUPERMASK or its affiliates.


XUPERMASK reserves the right to make technical changes to its products as part of its development program.

While every care has been taken to ensure the accuracy of the contents of this document, XUPERMASK cannot accept responsibility for any errors.

Medical Policy and Use in Safety-critical Compliance

XUPERMASK is not a medical device. XUPERMASK is NOT FDA-approved and DOES NOT replace other CDC recommended preventive measures including hand washing, social distancing, or refraining from touching your face XUPERMASK is NOT a Toy and not intended for children under the age of 16 **WARNING:** This face mask has not been FDA cleared or approved. The product has been authorized by FDA under an EUA for use as source control by the general public as well as by HCP in healthcare settings as to help prevent the spread of infection or illness during the COVID-19 pandemic. This product is authorized only for the duration of the declaration that circumstances exist justifying the authorization of the emergency use of medical devices, including alternative products used as medical devices, during the COVID-19 outbreak, under section 564(b)(1) of the Act, 21 U.S.C. §360bbb-3(b)(1) unless the authorization is terminated or revoked sooner. The face mask is intended to be used with the HEPA filter inserts. This product, which is not for medical use or for use in a high infection risk clinical setting, is not a respiratory protective device, nor a substitute for filtering facepiece respirators or for surgical face masks. It is not intended to be used to provide liquid barrier protection or for use in high-risk aerosol generating procedures.

XUPERMASK is for adult use only and not intended for anyone under 16. XUPERMASK contains small parts and is not a toy.

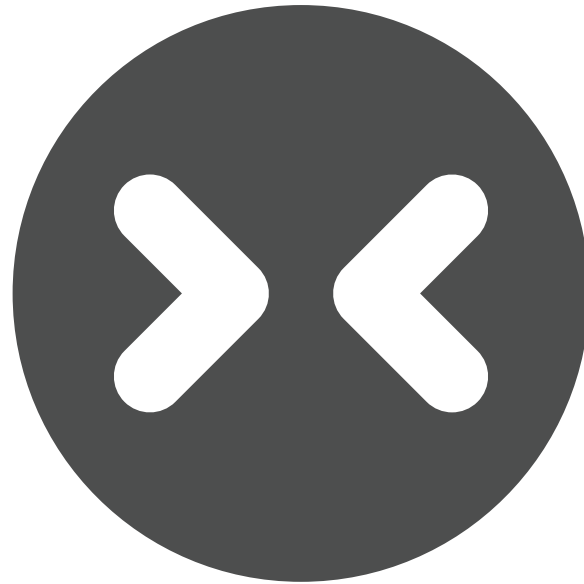

XUPERMASK